

Documentation

HiPath 2000, HiPath 3000, HiPath 5000

HiPath OpenOffice ME

OpenStage 20

Operating Instructions






Communication for the open minded



Siemens Enterprise Communications
www.siemens.com/open

SIEMENS

Important information

	<p>For safety reasons, the telephone should only be supplied with power:</p> <ul style="list-style-type: none">• using the original power supply unit. Part number: C39280-Z4-C51x (x: 0=EU, 1=US, 2=UK) or• in a LAN with PoE (Power over Ethernet), which complies with the IEEE 802.3af standard.
	<p>Never open the telephone or a key module. Should you encounter any problems, contact the responsible service personnel.</p>
	<p>Use only original Siemens accessories. The use of other accessories may be hazardous and will render the warranty, extended manufacturer's liability and the CE marking invalid.</p>

Trademarks

	<p>The device conforms to the EU directive 1999/5/EC as attested by the CE marking.</p>
	<p>All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.</p> <p>Proper disposal and separate collection of your old appliance will help prevent potential damage to the environment and human health. It is a prerequisite for reuse and recycling of used electrical and electronic equipment.</p> <p>For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.</p> <p>The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the directive 2002/96/EC. Countries outside the European Union may impose other regulations regarding the disposal of electrical and electronic equipment.</p>

Location of the telephone

- The telephone should be operated in a controlled environment with an ambient temperature between 5°C and 40°C.
- To ensure good speakerphone quality, the area in front of the microphone (front right) should be kept clear. The optimum speakerphone distance is 50 cm.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the plastic casing.
- Do not operate the telephone in damp environments such as bathrooms.

Software update



During a software update, the phone must not be disconnected from the power supply unit, the LAN line or the phone line. An update action is indicated by messages on the display and/or by flashing LEDs.

Documentation in Internet

This and other documentation can be found on the Internet at:
<http://www.enterprise-communications.siemens.com> > Products
> Phones & Clients > (Select Product) > Downloads.

To view and print documentation in PDF format, you require Acrobat Reader (free software):
<http://www.adobe.com>

Technical notes, current information about firmware updates, frequently asked questions and lots more can be found on the web at:
<http://wiki.siemens-enterprise.com/>

Contents

Important information2

Trademarks 2

Location of the telephone 3

Software update 3

Documentation in Internet. 3

General information.....8

About this manual 8

Service..... 8

Intended use 9

Telephone type 9

Speakerphone quality and display legibility 9

Getting to know your OpenStage phone10

OpenStage 20 user interface. 10

Ports on the underside of the phone. 11

 Using network ports more efficiently 12

Keys..... 13

 Function keys..... 13

 Mailbox key and Menu key 13

 Audio keys..... 13

 3-way navigator 14

 Keypad..... 15

Display..... 16

 Idle mode..... 16

Mailbox 17

 Messages 17

 Voicemail 17

Caller list 18

Program/Service menu 19

Basic functions.....20

Answering a call 20

 Answering a call via the handset 20

 Answering a call via the loudspeaker (speakerphone mode) 21

Switching to speakerphone mode..... 21

Switching to the handset..... 22

Open listening in the room during a call 22

Making calls..... 23

 Off-hook dialing 23

 On-hook dialing 23

Redialing a number	24
Ending a call.	24
Rejecting calls	25
Turning the microphone on and off	25
Calling a second party (consultation)	26
Switching to the held party (alternating)	26
Transferring a call.	27
Call forwarding.	28
Using variable call forwarding	28
Using call forwarding no reply (CFNR)	29
Call forwarding in the event of telephone failure (CFSS)	30
Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN) (not for U.S.)	31
Using callback	32
Storing a callback	32
Accepting a callback.	32
Viewing and deleting a stored callback	33

Enhanced phone functions34

Answering calls	34
Accepting a specific call for your colleague	34
Using the speakerphone	35
Answering calls from the entrance telephone and opening the door	36
Making calls.	38
En-bloc sending/correcting numbers	38
Using the caller list.	39
Dialing a number from the internal directory	40
Dialing from the telephone database (LDAP)	41
Making calls using system speed-dial numbers	43
Dialing with speed-dial keys	43
Talking to your colleague with a speaker call.	44
Talking to your colleague with discreet calling.	45
Automatic connection setup (hotline)	45
Assigning a station number (not for U.S.)	45
Associated dialing/dialing aid	46
During a call.	47
Using call waiting (second call)	47
Preventing and allowing call waiting (automatic camp-on)	48
Turning the call waiting tone on and off.	48
Saving a number	48
Parking a call	49
Conducting a conference.	50
Activating tone dialing/DTMF suffix-dialing	52
Transferring a call after a speaker call announcement in a group	53
Send trunk flash	54

If you cannot reach a destination. 55

 Call waiting (camp-on) 55

 Busy override - joining a call in progress 55

Using night answer 56

Displaying and assigning call charges57

Displaying call charges (not for U.S.) 57

Dialing with call charge assignment 58

Privacy/security59

Turning ringer cutoff on and off. 59

Activating/deactivating "Do not disturb". 59

Caller ID suppression. 60

Monitoring a room. 61

Trace call: identifying anonymous callers (not for U.S.) 62

Locking the telephone to prevent unauthorized use 63

Locking another telephone to prevent unauthorized use 64

Saving your PIN 65

More functions/services.66

Appointments function 66

 Saving appointments 66

 Using timed reminders 67

Sending a message. 67

 Creating and sending a message. 67

 Viewing and editing incoming messages. 68

Leaving an advisory message 69

 Deleting advisory messages 69

Using another telephone like your own for a call 70

Resetting services and functions
(system-wide cancellation for a telephone). 71

Activating functions for another telephone 72

Using system functions from outside
(DISA: Direct Inward System Access). 73

Using functions in ISDN via code dialing (keypad dialing) 74

Controlling connected computers or programs running on them/telephone
data services 75

Communicating with PC applications over a CSTA interface 76

Controlling relays
(only for HiPath 3000) 77

Sensors (HiPath 33x0/35x0 only). 77

Radio paging (not for U.S.). 78

Using team functions	79
Activating/deactivating a group call	79
Accepting a call for another member of your team	81
Ringing group	81
Uniform Call Distribution (UCD)	82
 Special functions in the LAN (PC network)	 84
Leaving hunt group/group call	84
Setting up "follow me" call forwarding	85
Using night answer	86
Ringing group	87
Controlling relays (only for HiPath 3000)	88
Opening a door	89
 Individual phone configuration	 90
Adjusting display settings	90
Adjusting the display to a comfortable reading angle	90
Setting contrast	90
Adjusting audio settings	91
Adjusting the receiving volume during a call	91
Adjusting the ring volume	91
Adjusting the ring tone	91
Adjusting the speakerphone to the room acoustics	92
Language for system functions	92
 Testing the phone	 93
Testing the telephone functions	93
 Different Displays in a HiPath 4000 Environment	 94
 Fixing problems	 95
Responding to error messages on the screen	95
Contact partner in the case of problems	95
Troubleshooting	96
Caring for your telephone	96
 Index	 97
 Overview of functions and codes	 101

General information

About this manual

This document contains general descriptions of the technical options, which may not always be available in individual cases. The respective features must therefore be individually defined in the terms of the contract.

If a particular function on your phone is not available to you, this may be due to one of the following reasons:

- The function is not configured for you or your telephone. Please contact your system support representative.
- Your communications platform does not feature this function. Please contact your Siemens sales partner for information on how to upgrade.

This user guide is intended to help you familiarize yourself with OpenStage and all of its functions. It contains important information on the safe and proper operation of your OpenStage phone. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.

These instructions should be read and followed by every person installing, operating or programming an OpenStage phone.



For your own protection, please read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.

This user guide is designed to be simple and easy to understand, providing clear step-by-step instructions for operating your OpenStage phone.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

Service



The Siemens service department can only help you if you experience problems or defects with the phone. Should you have any questions regarding operation, your specialist retailer or network administrator will gladly help you. For queries regarding connection of the telephone, please contact your network provider.

If you experience problems or defects with the phone, please dial the service number for your country.

Intended use

The OpenStage phone is a desktop or wall-mounted unit designed for speech transmission and for connection to the LAN. Any other use is regarded as unauthorized.

Telephone type

The identification details (exact product designation and serial number) of your telephone can be found on the nameplate on the underside of the base unit. Specific details concerning your communications platform can be obtained from your service technician.

Please have this information ready when you contact our service department regarding faults or problems with the product.

Speakerphone quality and display legibility



- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear.
The optimum handsfree distance is 20 inches (50 cm).
- Proceed as follows to optimize display legibility:
 - Turn the phone to tilt the display. This ensures you have a frontal view of the display while eliminating light reflexes.
 - Adjust the contrast as required → page 90.

Getting to know your OpenStage phone


The following sections describe the most frequently used operating elements and the displays on your OpenStage phone.

OpenStage 20 user interface



1	You can make and receive calls as normal using the handset .
2	The display permits intuitive operation of the phone → page 16.
3	The function keys allow you to call up the most frequently used functions during a call (e.g. Disconnect) → page 13.
4	 mailbox key and  menu key .
5	Audio keys are also available, allowing you to optimally configure the audio features on your telephone → page 13.
6	The 3-way navigator is a convenient navigation tool → page 14.
7	The keypad is provided for input of phone numbers/codes.

Ports on the underside of the phone

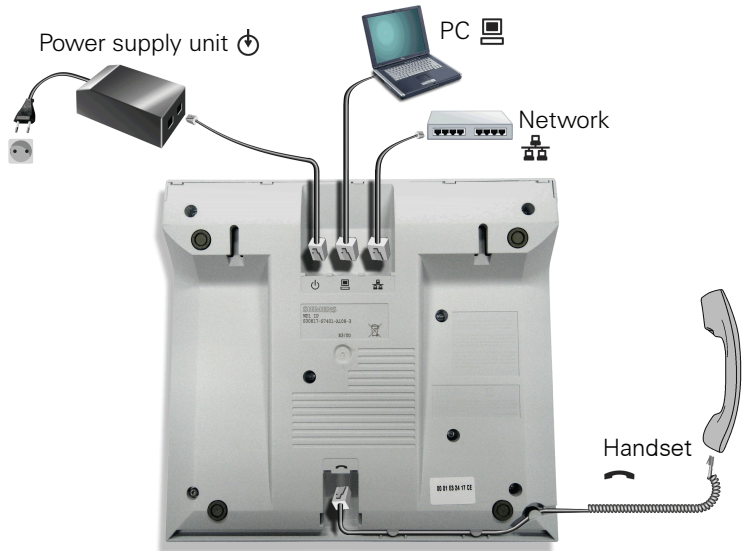



OpenStage 20 properties

Display type	LCD, 24 x 2 characters
Full-duplex speakerphone function	✓
10/100 Mbps Ethernet switch → page 12	✓
Wall mounting	✓

Using network ports more efficiently

OpenStage 20 has a built-in 10/100 Mbps Ethernet switch. This means that you can connect a PC to the LAN directly via the phone.

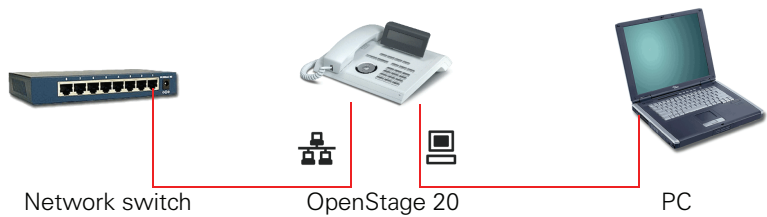





 To connect OpenStage 20 to a PC, you require only a commercial network cable (uncrossed).

Using this connection option saves one network port for each switch used and requires fewer or shorter network cables when arranged correctly.

Keys



Function key keys



Key	Function when key is pressed
	End (disconnect) call → page 24.
	Redialing → page 24.
	Button for fixed call forwarding (with red LED key) → page 28.
	Activate/deactivate microphone (also for speakerphone mode) → page 25.




Mailbox key and Menu key




Key	Function when key is pressed
	Open mailbox (with red LED key) → page 17.
	Open Program/Service menu (with red LED key) → page 19.

Audio keys









Key	Function when key is pressed
	Reduce volume and set contrast brighter → page 90.
	Turn speaker on/off (with red LED key) → page 21.
	Increase volume and set contrast darker → page 90.

3-way navigator


 Remove the protective film from the ring around the 3-way navigator before using the phone.

With this control, you can manage most of your phone's functions, as well as its displays.

Operation	Functions when key is pressed
 Press the  key.	In idle mode: <ul style="list-style-type: none">• Open the idle menu → page 16 In lists and menus: <ul style="list-style-type: none">• Scroll down
 Press the  key.	In idle mode: <ul style="list-style-type: none">• Open the idle menu → page 16 In lists and menus: <ul style="list-style-type: none">• Scroll up
 Press the  key.	Entry selected: <ul style="list-style-type: none">• Perform action













Keypad

In cases where text input is possible, you can use the keypad to input text, punctuation and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.

Example: To enter the letter "h", press the number  key on the keypad twice. When entering the text, all available characters for this key are displayed. After a short while, the character in focus is displayed in the input field.

Alphabetic labeling of dial keys is useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name; e.g. 0700 - PATTERN = 0700 - 7288376).

Character overview


Key	1x	2x	3x	4x	5x
	[1]	1			
	a	b	c	2	
	d	e	f	3	
	g	h	i	4	
	j	k	l	5	
	m	n	o	6	
	p	q	r	s	7
	t	u	v	8	
	w	x	y	z	9
	+	.	-	0	
	[2]				
	[3]				

- [1] Space
- [2] Next letter in upper case
- [3] Delete character

Text input

Enter the required characters via the keypad.

Select the functions using the keys  and .

Confirm your entry with .


Display

Your OpenStage 20 comes with a tilt-and-swivel black-and-white LCD display. Adjust the tilt and contrast to suit your needs → page 90.

Idle mode

Your phone is in idle mode when there are no calls taking place or settings being made.

Example:

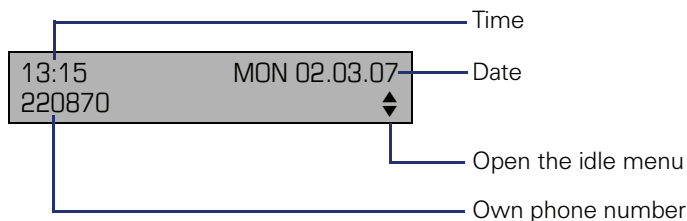

Idle menu

When in idle mode, press a key on the 3-way navigator → page 14 to display the idle menu. You can call up various functions here. The idle menu includes selected functions from the Program/Service menu → page 19.

It may contain the following entries:

- Caller list
- Forwarding on
- Lock phone
- DND on^[1]
- Advisory msg. on
- Ringer cutoff on
- Send message
- View callbacks^[2]
- Directory
- HF answerback on
- Suppress call ID
- Waiting tone off
- DISA intern

[1] Must be activated by service personnel.

[2] Only appears if callback requests are saved

Mailbox


Depending on the type and configuration of your communications platform (contact the relevant service personnel), messages from services, such as HiPath Xpressions are displayed in this application in addition to messages received.

Messages


You can send short text messages to individual internal stations or groups.

In idle mode (→ page 16) the following signals alert you to the presence of new messages:

-  key LED lights up
- Displays "Messages received".

Press the mailbox key .

Example:

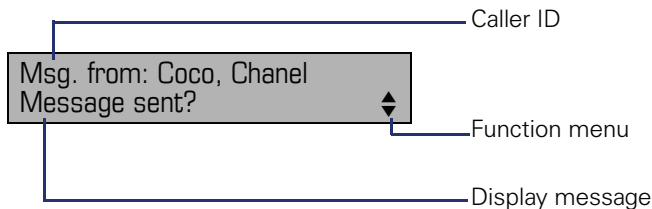

For a description of how to edit the entries → page 68.

Voicemail

If your telephone is connected to a voicemail system (such as Entry Voice Mail), the Mailbox key will also light up to alert you to any messages that have arrived.

An appropriate message also appears on the display (for instance, in Entry Voice Mail: "X new messages").

To play back your voicemails, follow the instructions on the display.

Caller list

If you are unable to accept an external or internal call, the call attempt is stored in the caller list.

You can store answered calls either manually (both internal and external calls) or automatically (external calls only; contact your service personnel for details).


Your telephone stores up to ten calls in chronological order. Each call is assigned a time stamp. The most recent entry not yet answered in the list is displayed first. Multiple calls from the same caller do not automatically generate new entries in the caller list. Instead, only the most recent time stamp for this caller is updated and its number incremented.

The caller list is automatically displayed → page 16 in the idle menu
→ page 39.

Callers with suppressed numbers cannot be saved in the call log.


Information is displayed regarding the caller and the time at which the call was placed.

Example:

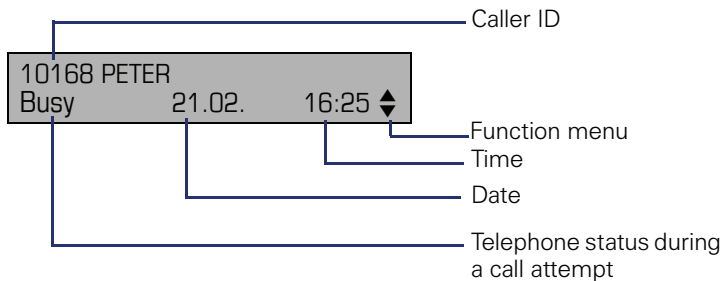


For a description of how to edit the call logs → page 39.

Program/Service menu

Use the  menu key to reach your communication system's Program/Service menu.

The menu key LED remains red as long as you are in this menu.




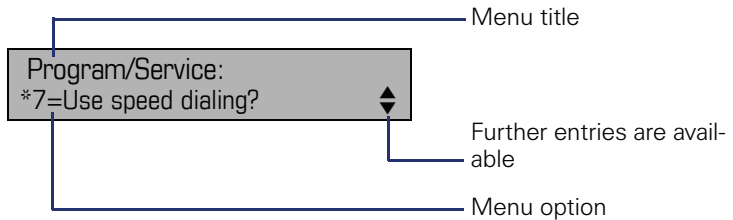




Example:



The menu structure comprises several levels. The first line in this structure shows the menu currently selected while the second line shows an option from this menu. A double arrow next to an entry indicates the availability of additional options for this entry.

Accessing the menu

There are three ways to open the Program/Service menu on your communication system:


1. Press the menu key . Use the  or  keys to select an option and confirm with the  key.
2. Press  or  and select a function from the idle menu → page 16.
3. In idle mode, press  or  and the code for the function you want.



For an overview of the maximum functions available, with corresponding codes, see → page 101.

Step by Step


Basic functions

 Please read the introductory chapter "Getting to know your OpenStage phone" → page 10 carefully before performing any of the steps described here on your phone.

Answering a call

Special default ring signaling is set for your telephone:


- When you receive an internal call, your telephone rings once every four seconds (single-tone sequence).
- When you receive an external call, your telephone rings twice in rapid succession every four seconds (dual-tone sequence).
- When you receive a call from the entrance telephone, your telephone rings three times in rapid succession every four seconds (triple-tone sequence).
- If a call is waiting, you hear a short tone (beep) every six seconds.


 Your service personnel can adjust the ring cadence for external and internal calls for you. In other words, different ring cadences can be set for different internal callers.

The number or the name of the caller appears on the display.

Answering a call via the handset

The phone is ringing. The caller appears on the screen.

 Lift the handset.



Raise or lower the volume. Keep pressing the key until the desired volume is set.

Step by Step

Answering a call via the loudspeaker (speakerphone mode)**Suggestions for using speakerphone mode:**

- Tell the other party that you are using speakerphone mode.
- The speakerphone works best at a low receiving volume.
- The ideal distance between the user and the telephone set in speakerphone mode is about 50 cm (approx. 20 inches).

The phone is ringing. The caller appears on the screen.



Press the key shown. The LED lights up.

if nec. or

Raise or lower the volume. Keep pressing the key until the desired volume is set.

Ending a call

Press the key shown. The LED goes out.

or



Press the key shown.

Switching to speakerphone mode

Prerequisite: You are conducting a call via the handset.



Hold down the key and replace the handset. Then release the key.

if nec. or

Set the call volume. Keep pressing the key until the desired volume is set.

U.S. mode

If the country setting is set to U.S. (ask the service personnel), you do not have to hold down the loudspeaker key when replacing the handset to switch to speakerphone mode.



Press the key shown.




Replace the handset. Proceed with your call.

if nec. or

Set the call volume. Keep pressing the key until the desired volume is set.

Step by Step



Switching to the handset

Prerequisite: You are engaged in a call in speakerphone mode.

Lift the handset. Proceed with your call.

Open listening in the room during a call

You can let other people in the room join in on the call. Let the other party know that you have turned on the speaker.

Prerequisite: You are conducting a call via the handset.

Activating



Press the key shown. The LED lights up.

Deactivating



Press the key shown. The LED goes out.

Step by Step

Making calls

Off-hook dialing



Lift the handset.



Internal calls: Enter the station number.

External calls: Enter the external code and the station number.

The called party does not answer or is busy:



Replace the handset.

On-hook dialing



Internal calls: Enter the station number.

External calls: Enter the external code and the station number.

The other party answers with speaker:



Lift the handset.

or

On-hook dialing: Speakerphone mode.

The called party does not answer or is busy:




Press the key shown. The LED goes out.

Step by Step

Redialing a number

The last three external telephone numbers dialed are stored automatically.

 If this feature is configured (contact your service personnel), account codes entered are also saved → page 58.

You can redial them simply by pressing a key.

Displaying and dialing saved station numbers



- Press the key once to dial the number last dialed.
- Press the key twice to dial the next to the last number dialed.
- Press the key three times to dial the third-to-the-last number dialed.

or

Next?

Keep confirming until the phone number you want appears.

Call?

Select and confirm the option shown.

Ending a call



Replace the handset.

or



Press the key shown.

Step by Step

Rejecting calls

You can reject calls which you do not wish to take. The call is then signaled at another definable telephone (contact your service personnel).

The phone is ringing. The caller appears on the screen.



Press the key shown.

If a call cannot be rejected, your telephone will continue to ring. The message "Currently not possible" is displayed (e.g. in the case of recalls).

Turning the microphone on and off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the handsfree microphone. You can also switch on the handsfree microphone to answer an announcement via the telephone speaker (speaker call, → page 35).

Prerequisite: A connection is set up, the microphone is activated.



Press the key shown. The LED lights up.

or



Press the lit key. The LED goes out.

Step by Step

Consultation?



Return to held call?

or

Quit and return?

Toggle/Connect?

Conference?

Leave conference?

Calling a second party (consultation)

You can call a second party while a call is in progress. The first party is placed on hold.

Confirm.

Call the second party.

Return to the first party:

Confirm,

select and confirm the option shown.

Switching to the held party (alternating)

Select and confirm the option shown.

Combine the calling parties into a three-party conference

Select and confirm the option shown.

Allowing call partners to continue a conference after you exit

Select and confirm the option shown.



For more information on conferences, see
→ page 50.

Step by Step**or****Transferring a call**

If the person you are speaking to wants to talk to another colleague of yours, you can transfer the call that colleague.

Confirm.

Enter the number of the party to which you want to transfer the call.

Announce the call, if necessary.

Replace the handset.

Select and confirm the option shown.

Step by Step

Call forwarding

Using variable call forwarding

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system.)

When call forwarding is active, a special dial tone sounds when you lift the handset.

If DID DTMF is active (contact your service personnel), you can also forward calls to this destination. Destinations: fax = 870, DID = 871, fax DID = 872.

If you are a call forwarding destination, your display will show the station number or the name of the originator on the upper line and that of the caller on the lower line.

Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network) → page 85!

Press the key shown.

Open the idle menu → page 16.

Select and confirm the option shown.

Confirm,

select and confirm the option shown,

select and confirm the option shown.

Enter the number of the telephone that is ringing.

Confirm.

Deactivating call forwarding

Press the key shown.

Select and confirm the option shown.



or



Forwarding on?

1=all calls?

or

2=external calls only?

or

3=internal calls only?



Save?



or

Forwarding off

Step by Step

Using call forwarding no reply (CFNR)

Calls that are not answered after three rings (=default, can be adjusted by service personnel) or that are received while another call is ongoing can be automatically forwarded to a specified telephone.



Press the key shown.

*495=CFNR on?

Select and confirm the option shown.



Enter the destination number.

- Enter the internal station number for internal destinations
- Enter the external code and the external station number for external destinations

Save?

Confirm.

Deactivating Call Forwarding No Reply



Press the key shown.

#495=CFNR off?

Select and confirm the option shown.

Delete?

Confirm.

or

Exit

Select and confirm to deactivate but not delete the forwarding destination.



If CFNR is activated, when you hang up, "CFNR: " appears briefly on the display.

Step by Step

Call forwarding in the event of telephone failure (CFSS)

If configured (consult your service personnel), you can define an internal or external call forwarding destination that activates in the event of telephone failure.



Press the key shown.

*9411= CFSS on?

Select and confirm the option shown.



Enter the number of the telephone that is ringing.

Save?

Confirm.

Deactivating call forwarding/deleting a destination:



Press the key shown.

#9411= CFSS off?

Select and confirm the option shown.

Delete?

Confirm the option shown to deactivate and delete the forwarding destination.

or

Exit?

Select and confirm to deactivate but not delete the forwarding destination.

Changing the forwarding destination (if call forwarding is active):



Press the key shown.

* 9 wxyz 4 ghi 1 1

Enter the code.

Change?

Confirm.



Change the destination phone number.

Save?

Confirm.

Step by Step

Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN) (not for U.S.)

If this function has been configured (contact your service personnel), you can forward calls to your assigned multiple subscriber number (MSN) (DID number) directly within the carrier network.

For example, you can forward your phone line to your home phone after business hours.



Press the key shown.

Trunk FWD on?

Select and confirm the option shown.

1=immediate?

Select and confirm the required type of call forwarding

or

2=on no answer?

select and confirm the option shown.

or

3=on busy?

select and confirm the option shown.



Enter your DID number.



Enter the destination number (without the external code).

Save?

Confirm.

Trunk FWD off?

Select and confirm the option shown.

Confirm the displayed call forwarding type.



Enter your DID number.

Step by Step

Using callback

You can request a callback if the internal station called is busy or if nobody answers. This also applies for external calls via ISDN exchanges. This feature saves you from having to make repeated attempts to reach the user. You receive a callback

- When the other party is no longer busy.
- When the user who did not answer has conducted another call.



When configured (contact your service personnel), all callback requests are automatically deleted over night.

Storing a callback

Prerequisite: You have reached a busy line or no one answers.

Confirm.

Callback?

Accepting a callback

Prerequisite: A callback was saved. Your telephone rings. "Callback: ..." appears on the display.

Lift the handset.



or



Press the key shown. The LED lights up.

or

Answer?

Select and confirm the option shown.

You hear a ring tone.

Step by Step



View callbacks?

Next callback?

Delete?

Exit?

or



or



Viewing and deleting a stored callback

Open the idle menu → page 16.

Select and confirm the option shown^[1].

Select and confirm to display additional entries.

Deleting a displayed entry

Confirm.

Ending retrieval

Select and confirm the option shown.

Press the key shown. The LED goes out.

Press the key shown. The LED goes out.

[1] „Different Displays in a HiPath 4000 Environment“ → page 94

Step by Step

Enhanced phone functions

Answering calls

Accepting a specific call for your colleague

You hear another telephone ring.



Press the key shown.

More features? ▾

Select and confirm the option shown.

*59=Pickup - directed?

Select and confirm the option shown^[1].

if nec.

Next?

Select and confirm, until the phone number/name of the desired subscriber is displayed.

Accept call?

Confirm.

or



If you know the number of the telephone that is ringing, enter it directly.

[1] „Different Displays in a HiPath 4000 Environment“ → page 94

Step by Step

Using the speakerphone

A colleague addresses you directly over the speaker with a speaker call. You hear a tone before the announcement. The other party's name or station number appears on the screen.

You can conduct the call with the handset or in speakerphone mode.



or

Mute off?

Lift the handset and answer the call.

Press the "OK" key to confirm your selection and answer the call.

or



Press the key and answer the call.



If handsfree answerback is enabled (see below), you do not need to switch on the microphone - you can answer directly. You can answer immediately in speakerphone mode.

If handsfree answerback is disabled (default setting), follow the procedure described above.

Placing a speaker call to a colleague → page 44.



HF answerback on?

or

HF answerback off?

Open the idle menu → page 16.

Select and confirm the option shown,

select and confirm the option shown.

Step by Step

Answering calls from the entrance telephone and opening the door

If an entrance telephone has been programmed, you can use your telephone to speak to someone at the entrance telephone and to activate a door opener. If you have the proper authorization (contact your service personnel), you can activate the **door opener**, enabling visitors to open the door themselves by entering a 5-digit code (using a DTMF transmitter or installed keypad).

Speaking to visitors via the entrance telephone

Prerequisite: Your telephone rings.



Lift the handset within thirty seconds. You are connected to the entrance telephone immediately.

or



Lift the handset after more than thirty seconds.



Dial the entrance telephone number.

Opening the door from your telephone during a call from the entrance telephone

Open door?

Confirm.

Opening the door from your telephone without calling the entrance telephone



Press the key shown.

*61=Open door?

Select and confirm the option shown.



Dial the entrance telephone number.

Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network)→ page 89!

Opening the door with a code (at the door)



After ringing the bell, enter the five-digit code (using the keypad or a DTMF transmitter). Depending on how the door opener has been programmed, a doorbell call signal may or may not be forwarded.

Step by Step



*89=Door opener on?



or

3=change password?

1=enable with ring?

or

2=enable w/o ring?



#89=Door opener off?

Activating the door opener

Press the key shown.

Select and confirm the option shown.

Dial the entrance telephone number.

Enter the five-digit code. Default code = "00000".

Select the displayed function and press the "OK" dialog key to change the code.

Select and confirm the option shown.

You can also open the door without a doorbell ring.

Deactivating the door opener

Press the key shown.

Select and confirm the option shown.

Step by Step

Making calls

En-bloc sending/correcting numbers

If this feature is configured (contact your service personnel), a connection is not attempted immediately when a station number is entered. This means that you can correct the number if necessary. The station number is only dialed at your specific request.



Internal calls: Enter the station number.
External calls: Enter the external code and the station number.

Dialing entered/displayed numbers



Lift the handset.

or

Please dial?

Confirm.

Correcting numbers entered



A station number can only be corrected as it is being entered. Station numbers stored for number redial, for example, cannot be corrected.

Delete number?

Select and confirm the option shown.
The last digit entered in each case is deleted.



Enter the required digit(s).

Canceling en-bloc sending

Cancel?

Select and confirm the option shown.

or



Press the key shown. The LED goes out.

or



Press the key shown.

Step by Step

Caller list?

Next?

Previous menu?

or



or



Time/date sent?

Call?

Delete?

Using the caller list

Detailed information, as well as a sample display entry are provided on → page 18.

Retrieving the Caller List

Prerequisite: Service personnel has set up a caller list for your telephone.

Open the idle menu → page 16.

Confirm^[1].

The latest entry is displayed, see the example on → page 18.

To view other calls, confirm each subsequent display.

Ending retrieval

Select and confirm the option shown.

Press the key shown. The LED goes out.

Press the key shown. The LED goes out.

Displaying the call time

Prerequisite: You have retrieved the caller list and the selected call is displayed → page 18.

Select and confirm the option shown.

Dialing a station number from the caller list

Prerequisite: You have retrieved the caller list and the selected call is displayed.

Select and confirm the option shown.



The caller is automatically deleted from the caller list when a connection is finally set up.

Removing an Entry from the Caller List

Prerequisite: You have retrieved the caller list and the selected call is displayed.

Confirm.

[1] „Different Displays in a HiPath 4000 Environment“ → page 94

Step by Step

Dialing a number from the internal directory

The internal directory contains all station numbers and system speed-dial numbers assigned to a name. Contact your service personnel to find out if one was configured for your system.

Prerequisite: Names have been assigned to the station numbers stored in the system.



Lift the handset.

or



Press the key shown. The LED lights up.

Directory?


Confirm.

if nec.

If several directories have been configured:

1=internal?

Confirm.



The first entry is displayed on the screen.

Scroll to next or previous entry.

or

Scroll Next?

Select and confirm the option shown,

or

Scroll Previous?

select and confirm the option shown.

or



if nec.

Delete Character?

Select and confirm each letter to be deleted. The last letter entered is deleted. If all letters are deleted, the first entry in the directory will be displayed again.

if nec.

Delete Line?

Select and confirm the option shown. All entered letters are deleted, and the first entry in the internal directory is displayed again.

The entry you wish to dial appears on the screen

Call?

Select and confirm the option shown.

Step by Step

Dialing from the telephone database (LDAP)

If configured (ask your service personnel), you can search for directory data in the LDAP database and dial the number of any subscriber you find there.

Prerequisite: The LDAP search feature has been configured in the system.



or



Lift the handset.

Press the key shown. The LED lights up.

Directory

Confirm.

if nec.

If several directories have been configured:

2=LDAP?

Select and confirm the option shown.



Enter the name you wish to search for using the keypad (max. 16 characters) → page 15.

You can enter an incomplete name, e. g. "mei" for "Meier".

if nec.

If configured (ask your service personnel), you can also search for surname and first name. To separate surname and first name by a space, enter "0". You can enter incomplete names, e. g. "mei p" for "Meier Peter".

if nec.

Delete Character?

Select and confirm each letter to be deleted. The last letter entered is deleted.



In large databases, the results of the search may be incomplete if too few characters are entered → page 42.

Search?

Confirm.

The name is searched for. This may take a few seconds.

Step by Step

Call?

or

or

Scroll Next?

or

Scroll Previous?

Call?

Modify search?

Show matches?

or

Modify search?

The result is displayed

If only one name is found, it is displayed.

Confirm.

If several names are found (max. 50), the first name is displayed.

Scroll to next or previous entry,

confirm,

select and confirm the option shown.

Select and confirm the option shown.

If no name is found

If your search does not yield any name corresponding to your query, you can extend the range of the search, e. g. by deleting characters.

Select and confirm the option shown.
For further procedure, see above.

If too many names are found

If more than the maximum of 50 names are found corresponding to your query, only an incomplete list of results can be displayed.

You can view these results, select any of the names, or change the search string (e. g. narrow the search by entering more characters).



In this case it is advisable to narrow down the search so that all corresponding names can be displayed.

Confirm, to view the incomplete list.
For further procedure, see above.

Narrow the search down.

Select and confirm, in order to change the search string.
For further procedure, see above.

Step by Step

Making calls using system speed-dial numbers

Prerequisite: You know the system speed-dial numbers (consult your service personnel).



Press the key shown.

*7=Use speed dialing?

Select and confirm the option shown.



Enter a three-digit speed-dial number.

if nec. Suffix-Dialing



If necessary, you can suffix-dial additional digits (for example, the user's extension) at the end of the saved station number.

If this feature is configured, a suffix is automatically dialed (for example, "0" for the exchange) if no entries are made within 4 or 5 seconds.

Dialing with speed-dial keys

Prerequisite: You have configured speed-dial keys → page 43.



Press the key shown.

*7=Use speed dialing?

Select and confirm the option shown.



Press the key shown.



Press the required speed-dial key.

Configure a speed-dial key

You can program the keys to with ten frequently used phone numbers.



Press the key shown.

*92=Change Speed Dial?

Select and confirm the option shown^[1].

Change?

Confirm.



Press the key shown.

[1] „Different Displays in a HiPath 4000 Environment“ → page 94

Step by Step



Press the required speed-dial key. If the key is already in use, the programmed phone number appears on the screen.

Change

Confirm.



First enter the external code and then the external station number.

Save

Confirm.

or **If you make a mistake:**

Previous?

Select and confirm the option shown. This deletes all entered digits.

Next?

Confirm.

or

Change?

Select and confirm the option shown,

or

Delete?

select and confirm the option shown,

or

Exit?

select and confirm the option shown.

Talking to your colleague with a speaker call

You can make a loudspeaker announcement through a loudspeaker if connected (ask your service personnel), or to an internal user with a system telephone without any action on their part.



Open the idle menu → page 16.

*80=Speaker call?

Select and confirm the option shown.



Enter the phone number.

➡ Responding to a speaker call → page 35.


Step by Step

Talking to your colleague with discreet calling

If this function has been configured (ask your service personnel), you can join an ongoing call conducted by an internal user at a system telephone with display. You can listen in unnoticed and speak to the internal user without being overheard by the other party (discreet calling).



Lift the handset.



Enter the code.



Enter your internal station number.



Your service personnel can protect your telephone against discreet calling.

Automatic connection setup (hotline)

If this function is configured (contact your service personnel), the system automatically sets up a connection to a preset internal or external destination.



Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after** a preset **period of time** (hotline after a timeout).

Assigning a station number (not for U.S.)

If this function has been configured (contact your service personnel), you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.



Press the key shown.

*41=Temporary MSN?

Select and confirm the option shown.



Enter the DID number you wish to use.



Dial the external number.

Step by Step

Associated dialing/dialing aid

If this function has been configured (contact your service personnel), you can use a dialing aid to dial numbers and set up calls for your telephone. The operating procedure depends on whether the dialing aid is connected to the **S₀ bus** or the **a/b (T/R) port**.

You can also use your system telephone as a dialing aid for other telephones.

Dialing aid on the S0 bus

On the PC, select a destination and start dialing.



The speaker on your telephone is switched on. Lift the handset when the other party answers.

Dialing aid at the a/b (T/R) port

On the PC, select a destination and start dialing.

"Lift the handset" appears on the PC screen.



Lift the handset.

Dialing aid from your telephone for another telephone:



Press the key shown.

*67=Associated dial?

Select and confirm the option shown.



Enter the internal station number ("Dial for:").



Enter the number you wish to dial.

Step by Step

During a call

Using call waiting (second call)

Callers can still reach you while you are engaged in another call. A signal alerts you to the waiting call. You can ignore or accept the second call.

When you accept the waiting call, you can either end the first call or place it on hold and resume the call later on.

You can block the second call or the signal tone (→ page 48).

Prerequisite: You are engaged in a phone call and hear a tone (every six seconds).

Ending the first call and answering the waiting call:



Replace the handset. Your telephone rings.



Answer the second call. Lift the handset.

Placing the first call on hold and answering the second call:

Call waiting?

Select and confirm the option shown.

You are connected to the call waiting party immediately. The first party is placed on hold.

Quit and return?

Ending the second call and resuming the first one

Confirm.

or



Replace the handset. "Recall appears on the display: ..." appears on the screen.



Lift the handset.

Step by Step

Preventing and allowing call waiting (auto-camp-on)

If this function has been configured (ask your service personnel), you can prevent or allow a second call → page 47 from being signaled by automatic camp-on during an ongoing call.



#490=Call wait.term.off?

or

*490=Call wait.term.on?

Press the key shown.

Select and confirm the option shown^[1],

select and confirm the option shown.

Turning the call waiting tone on and off

You can suppress the call waiting tone (every six seconds) for external calls. A one-time special dial tone then alerts you to the waiting call.

Activating



Open the idle menu → page 16.

Waiting tone off?

Select and confirm the option shown.

Deactivating



Open the idle menu → page 16.

Waiting tone on?

Select and confirm the option shown.

Saving a number

You can save your call partner's station number for subsequent redialing from the caller list → page 39.

Prerequisite: You are conducting a call.

Save number?

Select and confirm the option shown.

[1] „Different Displays in a HiPath 4000 Environment“ → page 94

Step by Step

Parking a call

You can park up to ten calls, either internal, external, or both. Parked calls can be displayed on and picked up from another telephone. This feature is useful if you want to continue a call at another phone.


Prerequisite: You are conducting a call.



Press the key shown.

*56=Park a call?

Select and confirm the option shown.



...



Enter the number of the park slot (0 - 9) and make a note of it. If the park slot number you entered is not displayed, it is already in use; enter another one.

Retrieving a Parked Call


Prerequisite: One or more calls have been parked. The phone is idle.



Press the key shown.

Retrieve call?

Select and confirm the option shown.



...



Enter the park slot number you noted earlier. If the park slot number you enter is not in use, you cannot retrieve the call.



If a parked call is not picked up, after a specific period of time the call is returned to the telephone from where it was parked (recall).

Step by Step

Start conference?

Conference?

Return to held call?

Add party?

Conference?

View conf parties?

Next?

Exit list?


View conf parties?

Next?

Remove party?

Conducting a conference

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.

 You can only add parties to or remove them from a conference if you initiated the conference.

Call the first party.

Select and confirm the option shown.

Call the second party. Announce the conference.

Select and confirm the option shown.

A tone sounds every 30 seconds to indicate that a conference is in progress.

If the second party does not answer

Confirm.

Adding up to five parties to a conference

Confirm.

Call the new party. Announce the conference.

Select and confirm the option shown.

Viewing the conference parties

Select and confirm the option shown. The first party is displayed.

To display other parties, confirm each subsequent display.

To exit the list: Select and confirm the option shown.

Removing parties from the conference

Select and confirm the option shown. The first party is displayed.

Confirm as often as required until the desired party appears.

Select and confirm the option shown.

Step by Step

Leave conference?

or



Select and confirm the option shown.

Replace the handset, if this feature is configured (contact your service personnel).

End conference?

or



Select and confirm the option shown.

Replace the handset, if this feature is configured (contact your service personnel).

Drop last conf. party?

Removing the ISDN central office party from the conference

Select and confirm the option shown.

Step by Step


Activating tone dialing/DTMF suffix-dialing

You can transmit dual-tone multifrequency (**DTMF**) signals to control devices such as an answering machine or automatic information system.

Press the key shown.

Select and confirm the option shown.

You can use the keys  through ,  and  to transmit DTMF signals.

 Ending the call also deactivates DTMF suffix dialing.
Your system may be configured so that you can start DTMF suffix-dialing immediately after setting up a connection.



*53=DTMF dialing?



Step by Step

Consultation?



*80=Speaker call?



or

Transfer?

Transferring a call after a speaker call announcement in a group

If this function has been configured (contact your service personnel), you can use a speaker call (announcement, → page 44) to announce a call in progress to a group of users → page 79.

After a member of the group has accepted the call request, you can transfer the waiting party.

Prerequisite: You are conducting a call.

Confirm. The other party is placed on hold.

Press the key shown.

Select and confirm the option shown.

Enter the group's station number.

Announce the call.

When a member of the group accepts the call → page 35, you are connected to this party.

Replace the handset.

Select and confirm the option shown.



If the connection between the two other parties is not established within 45 seconds, the call from the first part returns to you (recall).

Step by Step

Send trunk flash

To activate ISDN-type services and features through the network carrier’s analog trunks or those of other communications platforms (such as "consultation hold"), you must send a signal to the trunks before dialing the service code or telephone number.

Prerequisite: You have set up an external connection.

Press the key shown.

Select and confirm the option shown.

Enter the service code and/or telephone number.



*51=Trunk flash?



Step by Step

Camp-on

If you cannot reach a destination

Call waiting (camp-on)

Prerequisite: You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Wait (approx. 5 seconds) until "Camp-on" appears on the display and the busy tone is followed by the ring tone.

The called party can then respond → page 47.



The called party can prevent automatic call waiting → page 48.

If this feature is configured (contact your service personnel), you will hear the ring tone and the message "Camp-on" is immediately displayed.

Override?

Busy override - joining a call in progress

This function is only available if it has been configured by the service technician (contact your service personnel).

Prerequisite: You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Select and confirm the option shown.

The called party and person to whom this party is talking hear an alerting tone every two seconds.


If the called party has a system telephone with display, the following appears on the screen: "Override: (Number or name)".

You can now start talking.

Step by Step

Using night answer

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by service personnel (standard night answer service) or by you (temporary night answer service).

 Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network)→ page 86!

Activating

Night answer on?

Select and confirm the option shown.

*=default?

Press the "OK" dialog key to confirm (standard night answer service).

or



Enter the code (standard night answer service).

or



Enter the destination number (temporary night answer service).
Confirm.

Save?

Deactivating

Night answer off?

Select and confirm the option shown.

Service personnel can also configure an "automatic night answer service". The automatic night answer service activates at specific times for your telephone depending on how it is programmed.
You can deactivate the automatic night answer service or replace it with a night answer service you configured (see above).

Step by Step

Displaying and assigning call charges

Displaying call charges (not for U.S.)

For the current call:

Call charges are shown by default on the display when a call ends.

If you want to display call charges as they occur during a chargeable call, your service personnel must request this option from the network operator.

Call charge display must be requested from the network operator and configured by the relevant service personnel.

Depending on the setting, call charges are displayed during or after a call.

Depending on the network operator, free external calls are also displayed. The message "Free of Charge" appears on the screen either before or during the call.

If the cost indication facility has not been installed, the display will show the dialed number and/or the length of the telephone call.



If a call is forwarded, call charges are assigned to the destination of the call transfer operation.

For all calls and for the last call

Connection charges for the last chargeable call made are displayed first. After five seconds, the accumulated connection charge (total) is displayed.



Press the key shown.

*65=Show call charges?

Select and confirm the option shown.

Step by Step

Dialing with call charge assignment

You can assign external calls to certain projects.

Prerequisite: Your service personnel have defined account codes for you.



Press the key shown.

*60=Account code?

Select and confirm the option shown.



Enter account code.

if nec. #

Press this key.

or

#=Save?

Confirm.

May be necessary, depending on configuration; contact your service personnel.



Enter the external phone number.



You can also enter the account code during a call.

Step by Step

Privacy/security

Turning ringer cutoff on and off

If you do not wish to take calls, you can activate the ringer cutoff function. Calls are only identified by **one** ring signal, and they are shown on the display.

Activating



Ringer cutoff on?

Open the idle menu → page 16.

Select and confirm the option shown,

Deactivating



Ringer cutoff off?

Open the idle menu → page 16.

Select and confirm the option shown.

Activating/deactivating "Do not disturb"

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the busy tone, external callers are connected to another phone, which you can specify (contact your service personnel).

Activating



DND on?

Open the idle menu → page 16.

Select and confirm the option shown.

Deactivating



DND off?

Open the idle menu → page 16.

Confirm.



When you lift the handset, you will hear a special tone (continuous buzzing) reminding you that "Do not disturb" is activated.

Authorized internal callers automatically override the DND feature after five seconds.

Step by Step

Caller ID suppression

You can prevent your station number or name from appearing on the displays of external parties you call. The feature remains active until you deactivate it.

Activating



Open the idle menu → page 16.

Suppress call ID?

Select and confirm the option shown.

Deactivating



Open the idle menu → page 16.

Restore caller ID?

Select and confirm the option shown.



Your service personnel can activate/deactivate caller ID suppression for all phones.

Step by Step

Monitoring a room

You can use a phone to monitor a room. This function must be enabled on the monitoring phone. When you call this phone, you can immediately hear what is happening in that room.

Activating the telephone to be monitored



Press the key shown.

*88=Room monitor?

Select and confirm the option shown.

You can either leave the telephone in speakerphone mode or lift the handset and leave it directed towards the noise source.

Deactivating the telephone to be monitored



Press the lit key. The LED goes out.

or



Replace the handset.

Monitoring the room



Enter the internal station number of the phone located in the room that you wish to monitor.

Step by Step

Trace call: identifying anonymous callers (not for U.S.)

You can identify malicious external callers. You can record the caller's phone number during a call or up to 30 seconds after a call. In this case, you should not hang up.



Press the key shown.

*84=Trace call?

Select and confirm the option shown.



If the trace is successful, the transmitted data is stored by your network operator. Contact your service personnel.

Step by Step

Locking the telephone to prevent unauthorized use

You can prevent unauthorized parties from using your phone in your absence.

Lock and unlock phone



Open the idle menu → page 16.

Lock phone?

Select and confirm the option shown.

or

Unlock phone?

select and confirm the option shown.



Enter code (telephone lock) → page 65.



When the phone is locked, a special dial tone sounds when the handset is lifted. Within the system, users can make calls as normal.

Your phone can also be locked or unlocked by an authorized party → page 64.

Step by Step

Locking another telephone to prevent unauthorized use

If configured (contact your service personnel), you can lock and unlock other telephones to prevent unauthorized access.

If a phone user locks his or her phone and forgets the personal lock code, you can use this function to unlock the phone.



Press the key shown.

*943=Lock all phones?

Select and confirm the option shown.



Enter the internal station number of the phone you wish to lock/unlock.

*=lock phone?

Confirm,

or

#=unlock phone?

select and confirm the option shown.

Step by Step

Saving your PIN

Enter the lock code to use the functions

- for protecting your phone against unauthorized use
→ page 63
- for using another telephone like your own.
→ page 70

You can save this code.



Press the key shown.

*93=Change PIN?

Confirm.



Enter the current five-digit PIN.

If you have not yet set a PIN, use "00000" the first time.



Enter the new PIN.



Re-enter the new PIN.



If you forget your code, contact your service personnel. Your code can be reset to "00000".


Step by Step

More functions/services


Appointments function

You can configure your phone to call you to remind you about appointments→ page 67.
You must save the required call times. You can enter a single appointment that will take place in the next twenty-four hours or you can enter a daily recurring appointment.

Saving appointments



*46=Timed reminder on?



possibly

2abc

 or


7pqrs

One time only?

or

Daily?

Save?



#46=Timed reminder off?

Delete?

or

Exit?

Press the key shown.

Confirm.

Enter a 4-digit time, such as 0905 for 9.05 (= 9.05 a.m.) or 1430 for 14.30 (= 2.30 p.m.).

If the selected language is "US English" (configure → page 92) you can enter the code 2 for "am" or 7 for "pm" (default = "am").

Confirm.

Select and confirm the option shown.

Confirm.

Deleting and checking a saved appointment

Press the key shown.

Confirm.

Confirm.

Select and confirm the option shown.

66

Step by Step

Reminder at 1200



or



Using timed reminders

Prerequisite: You have saved a reminder → page 66.
The saved time arrives.

The phone is ringing. The appointment time is displayed.

Press key twice.

Lift the handset and replace it again.



If you do not answer the timed reminder, it is repeated five times and then deleted.

Sending a message

You can send short text messages to individual stations or groups of stations with system telephones.

Creating and sending a message

Open the idle menu → page 16.

Select and confirm the option shown.

Enter the internal station number of the recipient or group.

Select predefined text (can be changed by service personnel) and confirm.

Enter the code directly.

The code is shown on your display with the corresponding message.

Select and confirm the option shown.

Text entry (up to 24 characters) → page 15.

Confirm.



Transmitted text messages are saved as callback requests on system telephones with no display and on ISDN, pulse or tone dialing telephones.

Send message?



0=Please callback?



...



or

Enter message text?



Send?

or

Step by Step



View sent message?

Message sent?

Delete?



or

View messages? ▾

Message sent?

Time/date sent?

Call sender?

Delete?

Displaying and deleting messages you have sent

Prerequisite: The recipient has not yet accepted a sent message.

Open the idle menu → page 16.

Select and confirm the option shown.

Confirm.

The text message is displayed.

Select and confirm the option shown.

The message is deleted.

Viewing and editing incoming messages

Pay attention to the notes on → page 17.

The LED lights up. Press the key shown.

Confirm.

The sender's caller ID appears on the display.

Confirm.

The text message appears on the display.

Viewing the transmission time

Confirm.

Calling the sender

Select and confirm the option shown.

Deleting messages

Select and confirm the option shown.

Step by Step

Leaving an advisory message

You can leave messages/advisory messages on your phone's display for internal callers that wish to contact you in your absence.
When you receive a call, the message appears on the callers display.



Open the idle menu → page 16.


Advisory msg. on

Select and confirm the option shown.

0=Will return at:

Select predefined text (can be changed by service personnel) and confirm.

or



Enter the code directly.
The code is shown on your display with the corresponding message.



Predefined messages with a colon can be completed by entering a digit.

or

Enter message text?

Select and confirm the option shown.



Enter message (up to 24 characters) → page 15.

Save?

Confirm.

Deleting advisory messages



Open the idle menu → page 16.

Advisory msg. off?

Select and confirm the option shown.

Step by Step

Using another telephone like your own for a call

Other parties can temporarily use your phone like their own for an outgoing call.



Press the key shown.

PIN and Authorization

Select and confirm the option shown.

*508=Temporary Phone?

Select and confirm the option shown.



Enter the number of the other user.



Enter the other user's lock code → page 65.

if nec.

Change PIN?

If the other user has not set a PIN, he or she is prompted to do so on his or her phone.



Dial the external number.

This state is cancelled as soon as the call is ended.

Step by Step

Resetting services and functions (system-wide cancellation for a telephone)

A general reset procedure is available for initiated function. The following functions are deleted, if enabled:

- Forwarding on
- Advisory msg. on
- Ringing group on
- Hunt group off
- Suppress call ID
- Call waiting tone off
- Do not disturb on
- Ringer cutoff on
- Received messages:
- View callbacks



Press the key shown.

#0=Reset services?

Select and confirm the option shown.

Step by Step

Activating functions for another telephone

If configured (contact your service personnel), you can activate and deactivate the following functions for other phones (associated service):

- Do not disturb,
code: *97/#97 → page 59
- Call forwarding, code *11, *12, *13/#1 → page 28
- Lock and unlock phone,
code *66/#66 → page 63
- Ringing group
code *81/#81 → page 79
- Leave an advisory message,
code *69/#69 → page 69
- Group call
code *85/#85 → page 79
- Reset services and functions,
code #0 → page 71
- Control relays,
code *90/#90 → page 77
- Night answer,
code *44/#44 → page 56
- Timed reminders,
code *46/#46 → page 66



Press the key shown.

*83=Associated serv?

Confirm.



Enter the internal station number of the phone where you wish to activate the function.



Enter code (for example, *97 for "Do not disturb on").

For any additional input, follow the instructions on your display.

Step by Step

Using system functions from outside (DISA: Direct Inward System Access)

If configured (contact your service personnel), you can use an external phone like an internal station to set up an outgoing external connection via the system. You can also activate or deactivate the following system functions:

- Reset services and functions, code #0 → page 71
- Call forwarding, code *1/#1 → page 28
- Lock and unlock phone, code *66/#66 → page 63
- Save your PIN, code *93 → page 65
- Send a message, code *68/#68 → page 67
- Leave an advisory message, code *69/#69 → page 69
- Ringing group, code *81/#81 → page 79
- Group call, code *85/#85 → page 79
- Caller ID suppression, code *86/#86 → page 60
- Camp-on tone, code *87/#87 → page 48
- Open door, code *61 → page 36
- Release door opener, code *89/#89 → page 37
- Control relays, code *90/#90 → page 77
- Do not disturb, code *97/#97 → page 59
- Ringer cutoff, code *98/#98 → page 59
- Dial using speed dial, code *7 → page 43
- Associated service, code *83 → page 72

Prerequisite: Your phone supports tone dialing (DTMF) or you can switch your phone to tone dialing. The phone is not connected to the system.



Establish a connection to the system. Enter the station number (contact your service personnel).



Wait for the continuous tone (if necessary, switch phone to tone dialing) and enter the internal number assigned to you and the corresponding PIN.



Enter the code (only required if programmed in the system).

Step by Step



Wait for the dial tone and enter the code for example, *97 for Do not disturb on. If necessary, make further entries; refer also to the user guide for dial pulse/DTMF phones.

or



Dial the external number.



You can only perform one function/establish one outgoing connection at a time.
The connection is cleared as soon as the function is successfully activated.
In the case of an external call, the connection is cleared as soon as one of the call partners hangs up.

Using functions in ISDN via code dialing (keypad dialing)

If authorized (contact your service personnel), you can access ISDN functions in some regions using codes.



*503=Keypad dialing?

Press the key shown.

Confirm.



Enter the desired trunk number (contact your service personnel).



Entering a code for required ISDN function (contact your service personnel).



Contact your network provider to find out which ISDN functions can be code-operated in your country.


Siemens Enterprise Communications GmbH & Co. KG shall not be liable for damages/ costs which may be incurred by fraudulent activities or remote operation (such as toll fraud).

Step by Step

Controlling connected computers or programs running on them/telephone data services

If this function has been configured (contact your service personnel), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

Prerequisite: You have set up a connection.

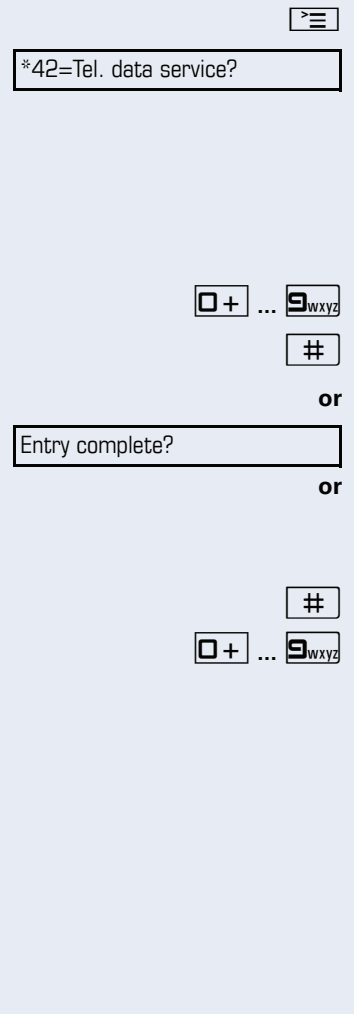

Press the key shown.

Confirm.

For entering data, you are guided by the connected computer. However, depending on configuration (contact your service personnel), you must activate your entries in one of the following ways:

Inputs in en-bloc mode:

Enter data.

Complete entry.

Confirm.

Inputs in online mode:

The connected computer processes your entries directly.

Enter the code.

Enter data.

Step by Step

Communicating with PC applications over a CSTA interface


If configured (contact your service personnel), you can use your phone to communicate with PC applications (CSTA = **C**omputer **S**upported **T**elecommunications **A**pplications). You send information to the application and receive information from the application, for example, via your phone display.



Enter the code.



Enter the three-digit ID for the application you wish to control.



Use the relevant keys to communicate with the application.

Ending communication with the application



Select and confirm the relevant CSTA message.

or



Lift the handset and replace it again.

Step by Step

Controlling relays (only for HiPath 3000)

If this function has been configured (contact your service personnel), you can use up to four relays to enable/disable different devices (such as a door opener). Depending on how you program the relays, you can activate and deactivate them manually or configure them to activate and deactivate automatically (after timeout).



Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network) → page 88!

*90=Control Relay On?

or

#90=Control Relay Off?



...



Select and confirm the option shown,

select and confirm the option shown.

Enter the relay.

Sensors (HiPath 33x0/35x0 only)

If configured (contact your service personnel), sensors are able to recognize signals, call your phone, and display an appropriate message on the screen.

Step by Step

Radio paging (not for U.S.)

If radio paging equipment (PSE) is connected to your system (contact your service personnel), you can locate people via their pocket receivers.

Pocket receivers signal a call request to the person you want to page. This person can then answer the page at the nearest phone.

Paging persons

To ensure that you can be found, you must have enabled a ringing group → page 81, call forwarding → page 28 or call forwarding-no answer (service technician) to the internal station number of your PSE. A call request is signaled automatically.

Answering the page from the nearest telephone

Lift the handset.



Enter the code.



Enter own station number.

Step by Step

Using team functions

If configured (consult your service personnel), your telephone is part of a team. The team consists of internal phones that are able to use certain functions.

Activating/deactivating a group call



Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network) → page 84!

If configured (consult your service personnel), you belong to one or more groups of stations, which can be reached via hunt group or group call station numbers. Incoming calls are signaled one after the other (= hunt group) or simultaneously (= group call) on all phones in the group, until a group member answers the call.

Each station in the group can still be reached via their personal station number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group.

You are part of a hunt group or call group



Open the idle menu → page 16.

Leave group?

Select and confirm the option shown,

or

Join group?

select and confirm the option shown.

You belong to multiple groups



Open the idle menu → page 16.

Leave group?

Select and confirm the option shown,

or

Join group?

select and confirm the option shown.

301 X Group name

If an "X" appears between group/trunk number or (such as 301) and group name, the audible tone is active for this group or trunk.

Step by Step

or

301 Group name

No "X" means that the call is deactivated.

Next?

Confirm. The next group/trunk number is displayed with a group name.

or

Leave group?

Select and confirm the option shown.
The audible tone for the group/trunk displayed is deactivated.

or

Join group?

Select and confirm the option shown.
The audible tone for the group/trunk displayed is activated.

or

#=Out of hunt group?

Select and confirm the option shown.
The audible tone for all groups and trunks is deactivated.

or

*=In hunt group?

Select and confirm the option shown.
The audible tone for all groups and trunks is activated.



If you have activated the audible tone for another group/trunk or deactivated the audible trunk for all groups/trunks you belong to, you will hear a special dial tone when you lift the handset.

Step by Step

Pickup - group?



*81=Ring group on?

Ring group off?

Accepting a call for another member of your team

You can use your own telephone to accept calls for other telephones in your team, even while engaged in an ongoing call. To do this, contact your service personnel to find out if a pickup group has been configured.

Prerequisite: Your telephone rings briefly. "Call for:" appears on the upper display line with the station number or name of the originator; the station number or name of the caller appears on the lower line.

Confirm.

Ring group

You can have calls for your telephone signaled audibly at up to five other internal phones. The phone that answers the call first receives the call.



Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network) → page 87!

Saving, displaying, and deleting telephones for the ringing group

Press the key shown.

Select and confirm the option shown.

Follow the display prompts (enter the internal station number).



If your phone belongs to a ringing group, your display will show the station number or the name of the originator on the upper line and that of the caller on the lower line.

Removing all telephones in a call ringing group

Select and confirm the option shown.

Step by Step

Uniform Call Distribution (UCD)

If configured (consult your service personnel), you may belong to a group of stations (agents) to which calls are distributed.

An incoming call is always assigned to the agent idle the longest.

Logging on and off at the beginning and end of your shift



Press the key shown.

UCD?

Select and confirm the option shown.

*401=Log on?

Confirm,

or

#401=Log off?

Select and confirm the option shown.



To log on, enter your identification number ("Agent:"). Contact your service personnel to find out what it is.

Logging on and off during your shift



Press the key shown.

UCD?

Select and confirm the option shown.

#402=Not available?

Confirm.

or

*402=Available?

Select and confirm the option shown.

Step by Step

Requesting and activating a work time

You can request/activate work time to ensure you have enough time to wrap up the last call. Your phone is excluded from call distribution for a set period or until you log back on.



Press the key shown.

UCD?

Select and confirm the option shown.

*403=Work on?

Confirm.

or

#403=Work off?

Select and confirm the option shown.

Turning the night service on and off for UCD



Press the key shown.

UCD?

Select and confirm the option shown.

*404=UCD night on?

Confirm.

or

#404=UCD night off?

Select and confirm the option shown.

Display the number of waiting calls



Press the key shown.

UCD?

Select and confirm the option shown.

*405=Calls in queue?

Confirm.

Step by Step

Special functions in the LAN (PC network)

If your telephone is operating in a HiPath 5000 environment, multiple HiPath 2000/HiPath 3000 systems are interconnected via a LAN (**L**ocal **A**rea **N**etwork, such as a proprietary PC network). You are conducting a call via the LAN (PC network).
In this instance, you must note certain particularities for some functions. These are described in this section.

 HiPath OpenOffice ME cannot be integrated into a HiPath 5000 environment.

Leaving hunt group/group call

Prerequisite: You are part of a hunt group/group call
→ page 79 in another HiPath 2000/HiPath 3000:

- Open the idle menu → page 16.
- Select and confirm the option shown.
- Enter the (DISA) station number of the other HiPath 2000/HiPath 3000.
- Confirm your entry.
- Enter the (DISA) station number of your phone.
- Confirm your entry.

DISA intern?

OK or #

Leave group?

or

Join group?

- Select and confirm the option shown,
- select and confirm the option shown.

You belong to multiple groups of another HiPath 2000/HiPath 3000

Enter group number for "directed joining/leaving".

Step by Step

Setting up "follow me" call forwarding

You can activate/deactivate call forwarding → page 28 for your phone from other phones in the HiPath 5000 environment.



DISA intern?



OK or

#



OK or

#

Open the idle menu → page 16.

Select and confirm the option shown.

(DISA) station number of the HiPath 2000/HiPath 3000.

Confirm your entry.

Enter the (DISA) station number of your phone.

Confirm your entry.

Activating



Forwarding on?

Open the idle menu → page 16.

Select and confirm the option shown.

1=all calls?

or

2=external calls only?

or

3=internal calls only?



Save?

Confirm,

select and confirm the option shown,

select and confirm the option shown.

Enter the destination phone number.

Confirm.

Deactivating



Forwarding off?

Open the idle menu → page 16.

Select and confirm the option shown.

Step by Step

Using night answer

If authorized (contact your service personnel), you can set telephones in other HiPath 2000/HiPath 3000 communications platforms as the night answer → page 56.



Open the idle menu → page 16.

DISA intern?

Select and confirm the option shown.



Enter the (DISA) station number of the other HiPath 2000/HiPath 3000.



or



Confirm your entry.



Enter the (DISA) station number of your phone.



or



Confirm your entry.

Activating



Open the idle menu → page 16.

Night answer on?

Select and confirm the option shown.



Enter the destination number (= temporary night answer service).

Save?

Confirm.

Deactivating



Open the idle menu → page 16.

Night answer off?

Select and confirm the option shown.

Step by Step

Ringling group

You can have calls for your telephone signaled audibly at external telephones or at telephones in other HiPath 2000/HiPath 3000 communications platforms → page 81.

Saving, displaying, and deleting telephones for the ringing group



Press the key shown.

*81=Ringling group on?

Select and confirm the option shown.

Add to ringling group?

Select and confirm the option shown,

or

Add another station?

select and confirm the option shown.

or

Display/remove?

Select and confirm, then follow the operating instructions.



Enter the phone number.

#=Entry complete?

Confirm.

Save?

Confirm.

Exit?

Select and confirm the option shown.



Open the idle menu → page 16.

Ringling group off?

Select and confirm the option shown.

Removing all telephones in a call ringling group

Step by Step

Controlling relays
(only for HiPath 3000)

If this feature is configured (contact your service personnel), you can also control relays → page 77 in other HiPath 3000 communications platforms.



Open the idle menu → page 16.

DISA intern?

Select and confirm the option shown.



Enter the (DISA) station number of the HiPath 3000, where you wish to control the relay.



or



Confirm your entry.



Enter the (DISA) station number of the phone you wish to use to control the relay.



or



Confirm your entry.

*90=Control Relay On?

Confirm,

or

#90=Control Relay Off?

select and confirm the option shown.



...



Enter the relay.

Step by Step

Opening a door

If configured (contact your service personnel), you can also activate the door opener → page 36 in other HiPath 2000/HiPath 3000 communications platforms.



DISA intern?



OK or

#



OK or

#

Open door?



Open the idle menu → page 16.

Select and confirm the option shown.

Enter the (DISA) station number of the HiPath 2000/HiPath 3000 where you wish to control the door opener.

Confirm your entry.

Enter the (DISA) station number of the phone you wish to use to control the door opener.

Confirm your entry.

Select and confirm the option shown.

Dial the entrance telephone number.

Step by Step

Individual phone configuration

Adjusting display settings

Adjusting the display to a comfortable reading angle

You can swivel the display unit. Adjust the display unit so that you can clearly read the screen.

Setting contrast

The display has four contrast levels that you can set according to your light conditions.

The display has four contrast levels that you can set according to your light conditions.

Press these keys while the phone is idle.

Select and confirm the option shown.

Change the display contrast. Press the key repeatedly until the desired level is obtained.

Save.

or

Display contrast?

or



Step by Step

Adjusting audio settings

Optimize the audio settings on your OpenStage for your environment and according to your personal requirements.

Adjusting the receiving volume during a call

You are conducting a call.

or

Raise or lower the volume. Keep pressing the key until the desired volume is set.



Save.

Adjusting the ring volume

or

Press one of the keys shown in idle mode → page 16.

Ring volume?

Confirm.

or

Raise or lower the volume. Keep pressing the key until the desired volume is set.



Save.

Adjusting the ring tone

or

Press one of the keys shown in idle mode → page 16.

Ring tone?

Select and confirm the option shown.

or

To adjust the ring tone: Keep pressing the keys until the desired tone is set.




Save.

Step by Step

Adjusting the speakerphone to the room acoustics


To help the other party understand you clearly while you are talking into the microphone, you can adjust the telephone to the acoustics in your environment: "Quiet room", "Normal room" and "Noisy room".



Press one of the keys shown in idle mode → page 16.



Select and confirm the option shown.



To set the room type: Keep pressing these keys until the setting you want appears on the screen.




Save.


Language for system functions



Press the key shown.



Select and confirm the option shown.



Select and confirm the option shown.



Select the language you wish to use (such as "Spanish") and press the "OK" dialog key to confirm.

Step by Step

Testing the phone

Testing the telephone functions

You can test your phone's functionality.

Prerequisite: The phone is in idle mode.



Press the key shown.

More features? ▾

Select and confirm the option shown.

*940=Phone test?

Select and confirm the option shown.

If everything is functioning correctly:

- all LEDs on the phone flash (only the menu key LED is continuously lit)
- your station number is displayed
- all pixels are active on the display
- the ring tone is audible

Different Displays in a HiPath 4000 Environment

Depending on the system configuration, not all functions may appear on the display exactly as shown in this document.

Depending on the system configuration, some display texts may differ from the display texts described in this document.

Please refer to the following table for an overview of such texts:

HiPath 2000 HiPath 3000 HiPath OpenOffice ME Display	HiPath 4000 Display	Description
View callbacks?	Display callbacks?	→ page 33
Pickup - directed?	Direct call pickup?	→ page 34
Caller list?	Call log?	→ page 39
Change Speed Dial?	Speed dialing?	→ page 43
Call wait.term.?	Camp-on termination?	→ page 48
Call wait.term.off?	Camp-on deact.?	
Call wait.term.on?	Camp-on act.?	

Step by Step

Invalid entry

Fixing problems

Responding to error messages on the screen

Possible cause:

Station number is incorrect.

Possible reaction:

Enter correct station number.

Not authorized

Possible cause:

Locked function selected.

Possible reaction:

Apply to service personnel for authorization for relevant function.

Currently not possible

Possible causes:

Dialed a non-existent station number. Called phone is unplugged.

Possible reactions:

Enter correct station number. Call this station again later.

Invalid station number

Possible cause:

Dialed your own station number.

Possible reaction:

Enter correct station number.

Contact partner in the case of problems

Contact your service personnel if a fault persists for more than five minutes, for example.

Step by Step

Troubleshooting

Pressed key does not respond:

Check if the key is stuck.

Telephone does not ring:

Check whether the "Do not disturb" function is activated on your telephone (→ page 59). If so, deactivate it.

You cannot dial an external number:

Check whether your telephone is locked.
If the phone is locked, enter your PIN to unlock it
→ page 63.

To correct any other problems:

First contact the relevant service personnel. If the service personnel are unable to correct the problem, they must contact Customer Service.

Caring for your telephone

- Never allow the telephone to come into contact with coloring, oily or aggressive agents.
- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use aggressive or alcohol-based cleansers on plastic parts. The use of scouring agents is also forbidden.

Index

Numerics

3-way navigator 14

A

Activating door opener 36
 Advisory message 69
 deleting 69
 Agents 82
 Announcement 44
 Assigning a DID number 45
 Associated dialing/dialing aid 46
 Associated service 72
 Audio keys 13
 Automatic camp-on
 preventing and allowing 48
 Automatic connection setup 45

B

Busy override 55

C

Call
 accepting 20
 accepting, group 81
 answering 20
 distributing 82
 entrance phone 36
 forwarding 28
 parking 49
 pickup, directed 34
 rejecting 25
 retrieving from park 49
 transfer 27
 transfer after announcement 53
 Call charge assignment 58
 Call charges
 for another telephone 57
 for your telephone 57
 Call duration 57
 Call forwarding 28

 in the event of telephone failure 30
 MSN in CO 31
 Call log 18
 Call request 18
 Call signal 20
 Call volume 20, 91
 Call waiting 55
 accepting 47
 allowing 48
 preventing 48
 Call waiting (camp-on)
 tone off 48
 Call waiting on/off 48
 Call waiting tone on/off 48
 Callback 32
 Caller ID suppression 60
 Caller list, using 39
 Calling a second party 26
 Calls in queue 82
 CE marking 2
 Central telephone lock 64
 CFNR 29
 Charges
 for another telephone 57
 for your telephone 57
 Code dialing in ISDN 74
 Conference 26
 Connection options 11
 Connection setup
 automatic 45
 Connection setup, automatic 45
 Consultation 26
 Control relays 77
 CSTA 76

D

Dialing
 en-bloc 38
 from the caller list 39
 internal/external calls 23
 on-hook dialing 23
 with speed dialing 43
 Dialing aid
 S0 bus 46
 Dialing internal calls 23
 Dialing numbers

from the internal directory	40
from the LDAP database	41
using redial	24
Direct inward system access (DISA)	73
Directory, internal	40
DISA	73
Discreet calling	45
Display	
for HiPath 4000 environment	94
Display angle	90
Display contrast	90
Distributing calls	82
Do not disturb	59
Door release	37

E

Edit dial number	38
Editing dial inputs	38
Editing the station number	38
En-bloc dialing	38
Entrance telephone	36
External code	23

F

Forwarding	
MSN in CO	31
multiple subscriber number (MSN)	31
Forwarding MSN in CO	31
Function keys	13
Functions	
activating/deactivating for another tele- phone	72
resetting	71
using from the outside	73

G

General information	8
Group call	79

H

Handsfree answerback	35
off	35
on	35
HiPath 5000	
"follow me" call forwarding	85
group call	84
hunt group	84
night answer	86
opening a door	89
relays	88
HiPath 5000 ringing group	87
Hotline	45
HTML format	3
Hunt group	79

I

Important information	3
Incoming calls	18
Internal directory	40
IP telephony	84

K

Keypad	15
Keypad dialing	74

L

LAN telephony	84
LDAP telephone database	41
Leaving an advisory message	69
Location of the telephone	3
Locking all phones	64
Locking/unlocking	63
Loudspeaker	21

M

Mailbox key	10, 13
Making calls	
with the dialing aid	46
Making external calls	23
Making mobile calls	70
Making trunk calls	23
Menu key	10, 13
Message	

answering	68
deleting/displaying	67
receiving	68
sending	67
Multiple subscriber number (MSN)	
forwarding	31

N

Nameplate	9
Night answer	56

O

Open listening	22
Opening a door	36
with a code	36
Operating instructions	2
operating instructions	
HTML format	3
ordering	3
PDF format	3
Operational elements	10
Outgoing calls	18

P

Parking a call	49
PDF format	3
Personal identification number	65
Phone	
locking another	64
locking/unlocking centrally	64
testing	93
using another like your own	70
Phone settings	90
Pickup (call)	34, 81
PIN	65
for a telephone	63
PIN, saving	65
Product designation	9
Program/Service menu	19
Programming your telephone	90
Project calls	58
Project code, account code	58

R

Radio paging equipment PSE	78
Recall	53
Receiving volume	20, 91
Redialing a number	24
from the caller list	39
Relays	77
Reset services	71
Resetting functions	71
Ring tone	91
Ring volume	91
Ringer cutoff	59
Ringing group	81
Room monitor	61

S

Safety precautions	2
Second call	
accepting	47
Sensors	77
Serial number	9
Setting your telephone	90
Settings	90
Speaker call	44
Speakerphone distance	3
Speakerphone mode	21, 92
Special dial tone	59
Speed-dialing	
dialing	43
saving station speed-dialing	43
suffix-dialing	43
system	43
Station number	
assigning	45
correcting	38
deactivating display	60
suppressing	60
Station speed-dialing	43
Suffix-dialing	
automatic	43
DTMF tone dialing	52
System speed-dialing	43
System-wide cancellation	71

T

Tel. data service	75
Telephone	
locking	63
locking/unlocking	63
settings	90
Telephone database LDAP	41
Telephone functions, testing	93
Telephone maintenance	96
Telephone test	93
Temporary phone	70
Testing the telephone	93
Text	
answering	68
receiving	68
Text message	
deleting/displaying	67
sending	67
Three-party conference	26
Timed reminder	66
Timed reminder, answering	67
Time-dependent hotline	45
Toggle/Connect	26
Tone dialing	52
Tone dialing (DTMF dialing)	52
Trace call	62
Transfer (call)	27
after announcement	53
Troubleshooting	96
Trunk flash	54

U

UCD	82
Unanswered calls	18
User support	8
Using Ethernet switches	12
Using network ports more efficiently	12

V




Variable call forwarding	28
Volume	
keys	13




W




Work time	83
-----------------	----

Overview of functions and codes




The following table lists all available functions, as shown on the display. If configured (contact your service personnel), functions can be activated interactively (select and confirm) via the Program/Service menu (select and confirm or enter a code).

Functions (=display)	... Interac- tively	... Via the Program/Service menu  → page 19	
			Code
Account code		✓	*60
Advisory msg. on	✓	✓	*69
Advisory msg. off	✓	✓	#69
Associated dial		✓	*67
Associated serv.		✓	*83
Call waiting	✓	✓	*55
Waiting tone off	✓	✓	*87
Waiting tone on	✓	✓	#87
Call wait.term.on		✓	*490
Call wait.trm.off		✓	#490
Callback	✓	✓	*58
View callbacks/Delete	✓	✓	#58
Caller list	✓	✓	#82
Save number	✓	✓	*82
Conference	✓	✓	*3
Start conference	✓		
Add party	✓		
End conference	✓	✓	#3
View conf parties	✓	✓	
Remove party	✓	✓	
Drop last conf. party			*491
Consultation	✓		
Return to held call	✓	✓	*0
Quit and return	✓	✓	*0
Transfer/Accept call	✓		
Control Relay On (only for HiPath 3000)		✓	*90
Control Relay Off (only for HiPath 3000)		✓	#90

Functions (=display)	... Interac- tively	... Via the Program/Service menu  → page 19	
			Code
Data I/O Service			*494
Directory			
1=internal	✓		*54
2=LDAP	✓		*54
DISA			
DISA intern	✓	✓	*47
Discreet Call			*945
DND on	✓	✓	*97
DND off	✓	✓	#97
Door opener on		✓	*89
Door opener off		✓	#89
DTMF dialing		✓	*53
En-bloc dialing			
Dial	✓		
Forwarding on	✓	✓	*1
1=all calls	✓	✓	*11
2=external calls only	✓	✓	*12
3=internal calls only	✓	✓	*13
Forwarding off	✓	✓	#1
CFNR on		✓	*495
CFNR off		✓	#495
Trunk FWD on	✓	✓	*64
Trunk FWD off	✓	✓	#64
HF answerback on	✓	✓	*96
HF answerback off	✓	✓	#96
Hotline			
Join group	✓	✓	*85
Leave group	✓	✓	#85
In hunt group	✓	✓	*85*
Out of hunt group	✓	✓	#85#
Keypad dialing		✓	*503

Functions (=display)	... Interac- tively	... Via the Program/Service menu  → page 19	
			Code
Lock all phones		✓	*943
Lock phone	✓	✓	*66
Unlock phone	✓	✓	#66
Change PIN		✓	*93
Mute on		✓	*52
Mute off		✓	#52
Night answer on	✓	✓	*44
Night answer off	✓	✓	#44
Open door		✓	*61
Override	✓	✓	*62
Page			
Answer page (not for U.S.)		✓	*59
Park a call		✓	*56
Retrieve call		✓	#56
Phone test		✓	*940
Pickup - directed		✓	*59
Pickup - group	✓	✓	*57
Accept call	✓		
Rejecting calls	✓		
Release			
Reset services		✓	#0
Ringer cutoff on	✓	✓	*98
Ringer cutoff off	✓	✓	#98
Ringing group on		✓	*81
Ringing group off		✓	#81
Room monitor		✓	*88
Select language		✓	*48
Send message	✓	✓	*68
View sent message	✓	✓	#68
View messages	✓	✓	#68
Mailbox			
Show call charges (own phone)		✓	*65

Overview of functions and codes

Functions (=display)	... Interac- tively	... Via the Program/Service menu  → page 19	
			Code
Speaker call		✓	*80
Suppress call ID	✓	✓	*86
Restore caller ID	✓	✓	#86
Tel. data service			*42
Temporary MSN (not for U.S.)	✓	✓	*41
Temporary Phone		✓	*508
Timed reminder on		✓	*46
Timed reminder off		✓	#46
Toggle/Connect	✓	✓	*2
Trace call		✓	*84
Transfer	✓		
Trunk flash		✓	*51
UCD			
Log on		✓	*401
Log off		✓	#401
Available		✓	*402
Not available		✓	#402
Work on		✓	*403
Work off		✓	#403
UCD night on		✓	*404
UCD night off		✓	#404
Calls in queue		✓	*405
Use speed dialing		✓	*7
Change Speed Dial? (station)		✓	*92

Reference No.:
A31003-S2000-U106-2-7619

© Siemens Enterprise
Communications GmbH & Co. KG
Hofmannstr. 51,
D-81359 München

Communication for the open minded

Siemens Enterprise Communications
www.siemens.com/open

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract. Subject to availability. Right of modification reserved. The trademarks used are owned by Siemens Enterprise Communications GmbH & Co. KG or their respective owners.